

Bar Code Reader Configuration

This configuration is for the LS2208 bar code reader for use with the FTD Mercury Cherry keyboard in Point of Sale.

IMPORTANT Do not attempt to scan these bar codes on the monitor; it will not work. You must print the page out and scan it.

TASK To configure the LS2208 bar code reader:

- 1 Set the LS2208 defaults by scanning this barcode:



- 2 Scan the Scanner Emulation Host barcode:



- 3 Scan the 50 uS Module Width barcode:



- 4 Scan the Ignore Decode LED barcode:



- 5 Reboot your system.

